




# Assembly Instruction

## Neutrik NP3X Ultra Slim Stereo

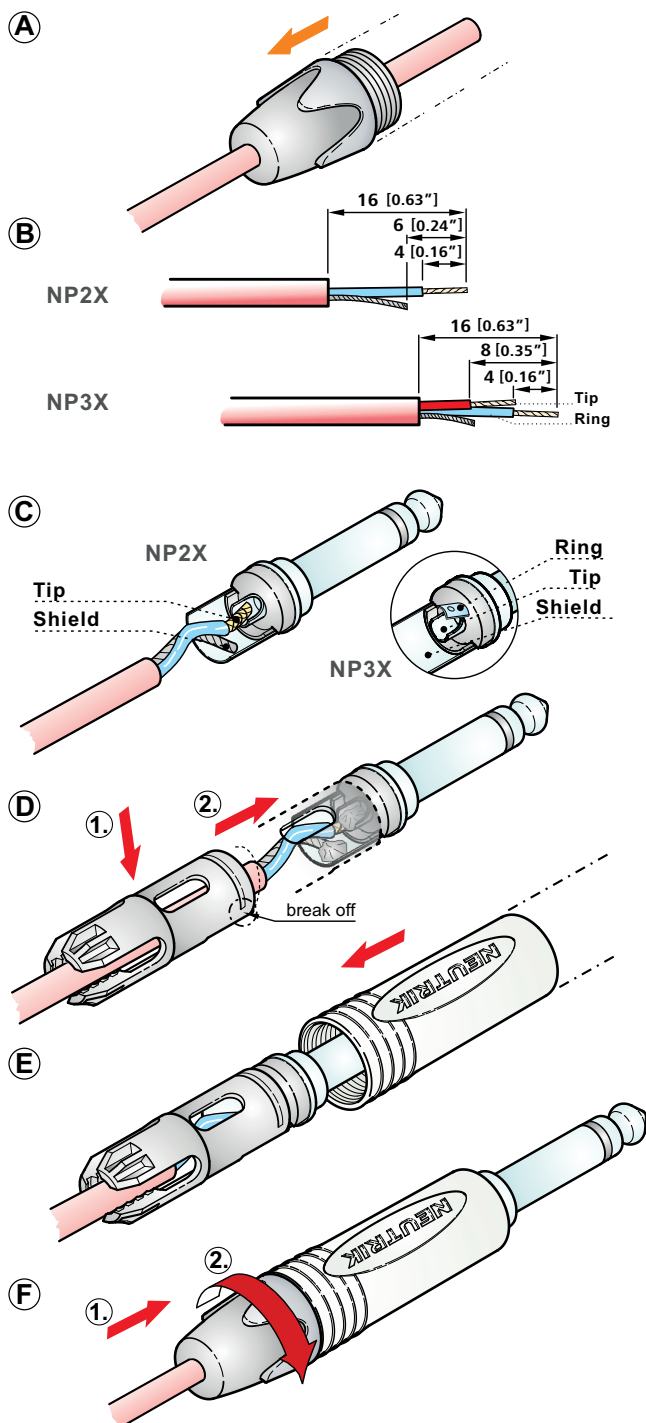

**A** Slide the boot onto the cable.

**B** Prepare cable as shown.

**C** Solder the wire ends.

**D** Position the chuck onto the cable and align chuck with plugfinger.

**Attention:**  
If using a cable with O.D. > 5.50 mm [0.216"] break away this part of the chuck.

**E** Slide the housing onto the plugfinger with the chuck.

**F** Finish the installation by tighten the bushing onto the connector.