



# Assembly Instruction

Neutrik NAC3MPXXB powerCON 16A  
Power-Out Chassis Mount Connector

## Fastening recommendation for Neutrik powerCON 20 A chassis connectors

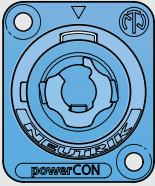
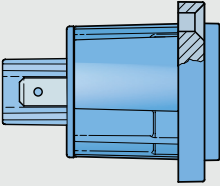

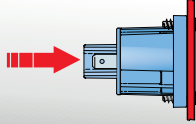
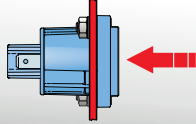
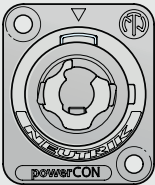
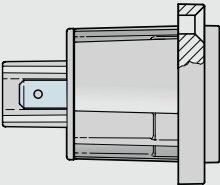

### ■ Rear mounted connectors:

Versions with countersunk mounting holes: no suffix (example: NAC3MPXXA)

### ■ Convenient fastening with countersunk screw holes:

(example: NAC3MPXXA\*)

Please see the recommended options including the torque limits below:

Chassis connector (note mounting hole type)		Screw Type   Part number example (screws not included)		Mounting version & maximum allowable torque $M_A$	
				Rear assembly	Front assembly
		 <b>NAC3MPXXA*</b> (no suffix)	<ul style="list-style-type: none"> <li>Countersunk thru holes for countersunk machine screws (e.g.: M3, 4-40)</li> </ul>		
				50 Ncm	50 Ncm
		 <b>NAC3MPXXB*</b> (no suffix)	<ul style="list-style-type: none"> <li>Countersunk thru holes for countersunk machine screws (e.g.: M3, 4-40)</li> </ul>		
				50 Ncm	50 Ncm